ELP-3000/3300

DATA VIDEO PROJECTOR

EPSON®
Easy Setup

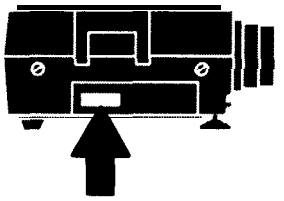

1 Plug the LCD connector on the Y-cable into the projector5 Computer IN/OUT port.

2 **Plug the VGA connector on the** Y-cable into the laptop's monitor port.

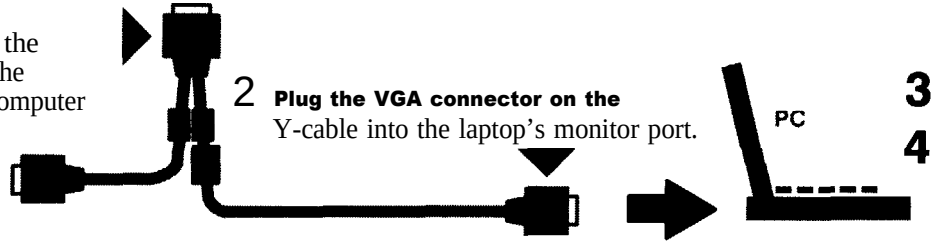

3 Tighten the screws for all connectors.

4 Connect an AC adapter to the laptop or PowerBook and plug it into a wall outlet.

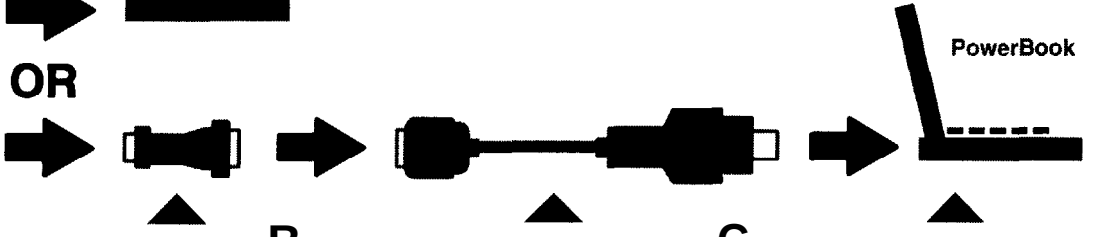

A Attach the Macintosh VGA adapter to the VGA connector on the Y-cable.

B Connect the Macintosh VGA adapter to the PowerBook's video-out cable.

C Plug the video-out cable into the video-out connector on the back of the PowerBook.

Using The Projector

a. Turn on the projector and then turn on the computer.
b. If you're using a PowerBook™, choose Mirroring in the Display Control Panel. If you're using a PC laptop, you may have to set the display to appear on both the computer's screen and the projector.
c. Zoom in the image (make it smaller) by rotating the zoom ring.
d. Adjust the focus by rotating the focus ring and zoom out to correct image size.
e. If the image is too high or too low, press the purple buttons and raise or lower the projector.
f. Turn the feet to further adjust the height.

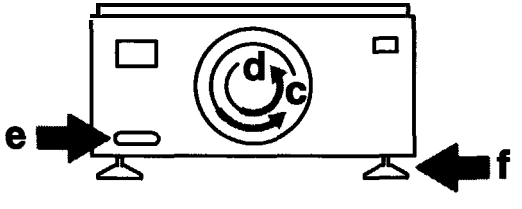

See your *Owner's Manual* if you want to control the projector from your computer or use external audio or video sources, an external speaker, or a desktop computer.

Warning: Never look into the lens when the lamp is on. Never lift or ho/d the projector by its lens.

If you need help or EPSON Road Service, call 1-800-922-8911.

Take Along Checklist

- ❑ Computer
- ❑ Projector lens cover
- ❑ Power cord
- ❑ Y-cable
- ❑ Remote control unit
- ❑ Macintosh® adapters: VGA, monitor, and serial
- ❑ RS-232C serial cable and ELP Utilities Diskettes
- ❑ AV (audio/video) cable (for external sources)
- ❑ *Owner's Manual*
- ❑ Extra AA batteries (for the remote control **unit),fuse,** and lamp
- ❑ _____
- ❑ _____
- ❑ _____

EPSON is a registered trademark of Seiko Epson Corporation. Other product names used herein ore for identification purposes only and may be trademarks of their respective owners. EPSON disclaimers any and all rights In those marks.
Copyright © 1996 by Epson America, Inc., Torrance, California, USA

10/96